

Installation Instructions for Magnasafe - MS6, MS6-SS, MS21 & MS21-SS



Description

MAGNASAFE MS6 and MS21 safety switches are non-contact, magnetically operated switch and actuator suitable for use in machine guarding applications. The non-contact operation has a 10 mm switching distance helping to ensure a long and trouble free operating life.

These safety switches are available in a robust ABS, or 316 Grade Stainless Steel housing and both switch and actuator are fully sealed to IP67/IP69K making them suitable for use in wet or dusty environments. They are easy to install and tolerant to misalignment. With correct installation, these safety switches comply with the guidelines given in EN14119.

Magnasafe safety switches are designed to be used in part of safety related control system. A risk assessment should take place to establish that the specifications of these safety switches are suitable for the application required. See Technical Specifications below or contact Mechan Controls for further information.

KEEP THIS GUIDE FOR FUTURE REFERENCE


The information is designed to help suitably qualified personnel install and operate Mechan Controls safety equipment. Before using this product, read this guide thoroughly along with any relevant European and/or National Standards E.g. Machinery Directive 2006/42/EC and its Amendments, Provision and Use of Work Equipment Regulations. Further information can be obtained from Mechan Controls Ltd.

Technical Specifications	MS6, MS6-SS	MS21, MS21-SS	
Contacts	Maximum 2 x NO + 1 x NC	Maximum 2 x NO + 1 x NC	
Safety Contact Rating	230Vac / 2Amps, 110Vac / 3Amps or 24Vdc / 1 Amp	230Vac / 2Amps or 24Vdc / 1 Amp	
Safety Contact Switching	10mm ON (MIN) / 28mm OFF (Max) 10mm ON (Min)/ 28mm OFF (Max)		
Auxiliary Contact Rating	24Vdc / 300mA 24Vdc / 300mA		
Auxiliary Contact Switching	11mm OFF (Min) / 21mm ON (Max)	11mm OFF (Min) / 21mm ON (Max)	
Internal Fuse	230Vac - 2 Amps / 110Vac - 3.5Amps / 24Vdc - 1 Amp	230Vac - 2 Amps / 24Vdc - 1 Amp	
External Fuse (Customer Supplied)	230Vac - 1.6 Amps / 110Vac - 3.0 Amps 24Vdc - 800mA	· · · · · · · · · · · · · · · · · · ·	
Construction	RED ABS, or 316 Grade Stainless Steel RED ABS, or 316 Grade Stainless Steel		
IP Rating	IP67 / IP69K	IP67 / IP69K	
Operating Temperature	-25°C to +55°C (High Temp -25°C to +125°C)	5°C (High Temp -25°C to +125°C) -25°C to +55°C (High Temp -25°C to +125°C)	
Fixing	M4 Torx security screws (Tightening Torque 1.0NM)	M4 Torx security screws (Tightening Torque 1.0NM)	
Connection	Pre-wired or M12 Quick Disconnect	Pre-wired or M12 Quick Disconnect	
Vibration	10 - 50Hz IEC 68-2-6	10 - 50Hz IEC 68-2-6	
Shock	30g, 11ms IEC 68-2-27	30g, 11ms IEC 68-2-27	

Safety Related Data				
B10d	2,000,000	PFH	6.52 x 10 ⁻⁸	
TM (Mission Time)	> 20 Years	PFHd	4.3 x 10 ⁻⁸ See Note 1	
DC	99%	SFF	98%	
MTTFd	High > 100 Years (Based on usage rate of 360 Days/Year, 24 Hours/Day, 10 Operations/Hour)			

Note 1: Based on dual channel wiring according to CAT 4. Diagnostic coverage provided by downstream control logic. DC - medium, MTTFd = 100 Years. Suitable for performance level applications PLe according to ISO 13849-1. (SIL 3 or SIL 2 according to IEC 62061)

Safety Standards			
	CE Complies with all relevant sections of the CE Marking Directive		
Approvals	cUL 508 Industrial Control TUV Approved		
International Directives	Machinery Directive 2006/42/EC, Low Voltage Directive 2014/35/EU; EMC Directive 2014/30/EU, RoHS Directive 2011/65/EU		
	EN 12100 Safety of Machinery. General principles for design.		
	EN ISO 14119 Safety of Machinery. Interlocking devices associated with guards. Principles for design and selection. EN ISO 13849 Safety of Machinery. Safety related parts of control systems.		
	EN ISO 62061 Safety of Machinery. Functional safety of safety related electrical, electronic and programmable electronic control systems		
International Standards	EN 60204 Safety of Machinery. Electrical equipment of machines.		
	EN 60947-5-1 Low-voltage switchgear and controlgear.		
	EN 60947-5-3 Low-voltage switchgear and controlgear.		

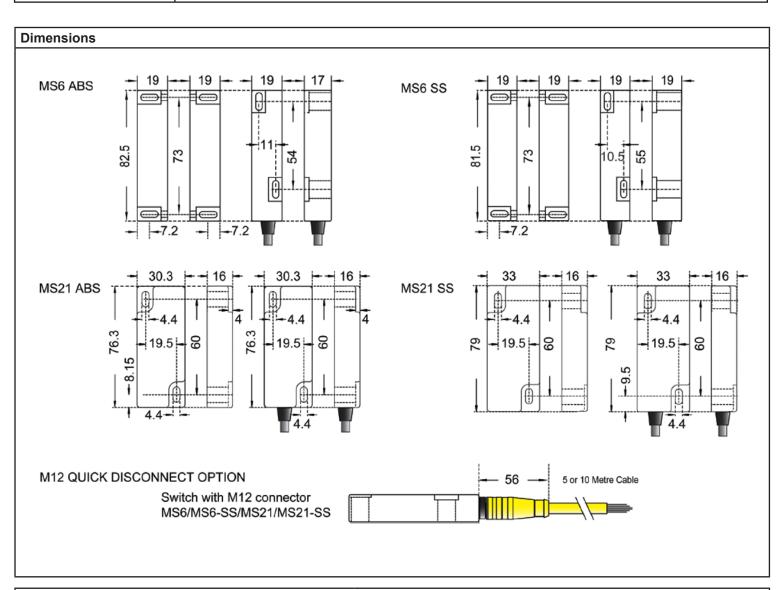

Mounting

Do not use safety switches as a stop. 1 mm separation when closed provides the best results.

Mount the switch on to the machine frame and the actuator on to the opening edge of the door.


Always try to mount the switch on non-ferrous material. (Ferrous materials may reduce the switching distance.)

EN14119: Hide the actuator where possible.

NOTES:

Minimum separation 50mm between adjacent switches

DO NOT mount on hinged side of the guard.

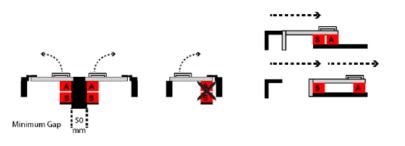


NOTE: MS21-SS-SP-ACT


If mounting switch and actuator on ferrous metal using the MS21-SS-SP-ACT actuator may improve the switching performance (ABS actuator has red encapsulation and stainless steel actuator has black encapsulation


Connections & Fuses

PRE-WIRED

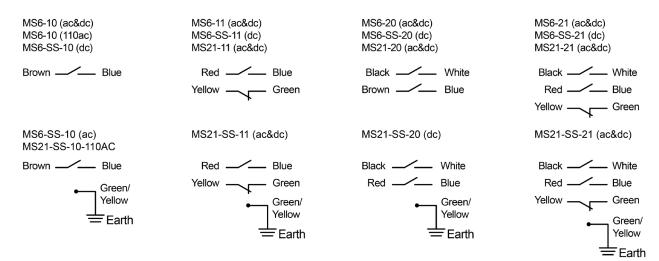

QUICK DISCONNECT

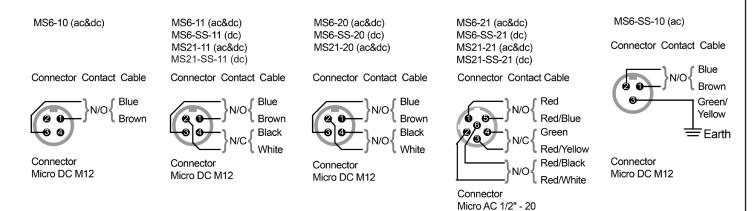

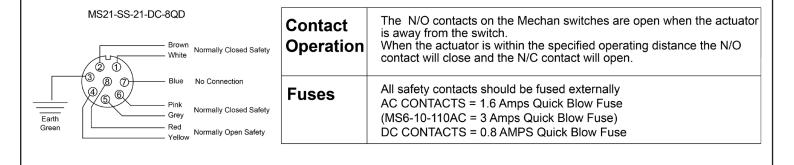


Operation

The N/O contacts on the MS6 and MS21 switches are open when the actuator is away from the switch.


When the actuator is within the specified operating distance, the N/O contact will close and the N/C contact will open.


The MS6 & MS21 safety switches and actuators are designed to approach each other from most angles. When the guard is closed the targets on the printed face of the switch and actuator must be aligned.

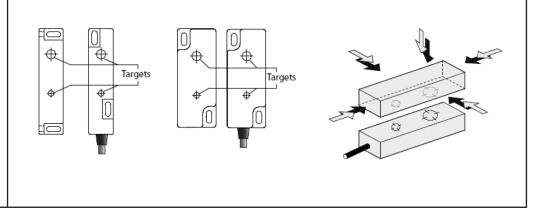



Installation Instructions for Magnasafe - MS6, MS6-SS, MS21 & MS21-SS

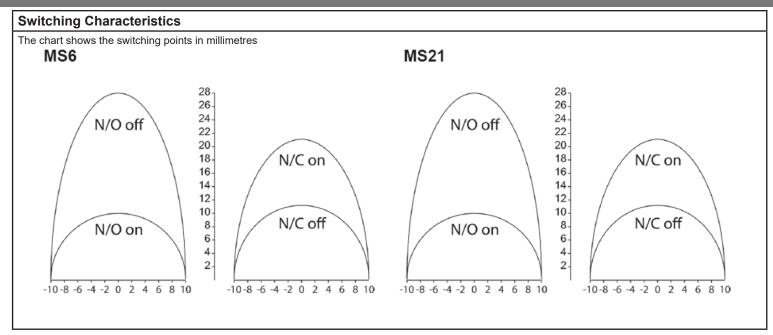

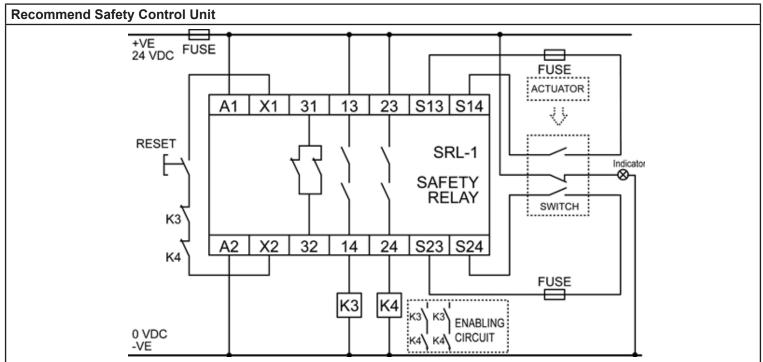

IMPORTANT

All control contacts should be externally fused.

Recommended Safety Control Unit Mechan Part Number: SRL-1 24VAC/DC or EM1 & ESM

Maintenance

It is recommended to check the safe operation of the switches and look for signs of damage or excessive wear on a weekly basis. Damaged units should be replaced or returned to the manufacturer for repair where practical.

Notes

In the interest of product development specifications are subject to change without notice. It is the responsibility of the user to ensure compliance with any acts or by-laws in place. All information regarding Mechan equipment is believed to be accurate at the time of printing. Responsibility cannot be accepted for errors or omissions.

www.pneutrol.com/industrialspares